

PROGRAMMING SUMMARY

1. Enter the program mode by applying power to the PE-1000 with the PAGE key pressed.
2. Enter in the digit, "1" and then the PAGE key.
3. Parameter -01 will be displayed.
4. Now program in the new data by referring to the following table:

Parameter #	Function
1	Programs the automatic page feature 0 = no 1 = yes
2	Programs the talk cycle 0 = no 1 = yes
3	Programs the call capacity 0 = 100 call 1 = 1000 call
4	Alert tone programming 0 = no alert tone 1 = 5 beeps 2 = warble
5	Pre-transmit delay (ms.)
7	Code plan selection (Enter in 2 digits)
8	Tone group selection (for 100 call only)
9	Duration of tone A (ms.)
10	Intertone delay (ms.)
11	Duration of tone B (ms.)
12	Group call selection 0 = no 1 = yes
13	Duration of Group Call (ms.)

5. Exit the program mode at any time by pressing the CLEAR key.

NOTE: POWER-UP ERROR CODES

- 5E = Return to default
- A1 = EEPROM Bad
- A2 = Keyboard Bad