

## Resetting the TP-38 EE-prom's

A standard "TP-38" can be reset to a default condition by swapping the position of U10 and U11 on main board (X2212AP).

To reset the EE-prom (U7 on "TP-DCS") in "DPL" enabled panel, apply power to the TP-38, then using two clip leads, simultaneously short pin 1 and pin 20 to ground. Remove power from the TP-38. Re-apply power, and the unit will be reset to the default parameters.